

OEM Part Number	PARTS DESCRIPTION	PRICE IN JPY	PRICE IN USD
04371-36050	SPIDER KIT; UNIVERSAL JOINT; R	9,100	59
13407-17010	PULLEY, CRANKSHAFT, NO.2	17,400	112
13568-19195	BELT; TIMING; 1HZ; TOYOTA	5,700	37
48531-69885	SHOCK ABSORBER; GAS; REAR;	7,300	47
48511-69685	SHOCK ABSORBER; GAS; FRONT;	7,300	47
31321-14020	PAD; PEDAL; CLUTCH/BRAKE;	300	2
47491-20011	GROMMET; BACKING PLATE; REAR	200	1
47730-35080	CALIPER; BRAKE; FRONT; RH; HZJ	70,000	451
47730-60021	CALIPER; BRAKE; FRONT; RH HJ75	79,800	514
48823-60030	COVER; BUSH; STABILIZER BAR;	800	5
69210-90K00	HANDLE ASSY; DOOR; RH; OUTER;	3,000	19
69220-90K00	HANDLE; DOOR; OUTER; LH;	3,000	19
81561-90K09	TAIL LIGHT; W/ LENS; RH;	13,100	84
90101-12167	BOLT; CALIPER; REAR; TOYOTA	200	1
90119-12088	BOLT; SHOCK ABSORBER; TOYOTA		
90214-42030	WASHER; LOCK; TOYOTA HZJ75	300	2
90215-42025	WASHER; ADJUSTING LOCK NUT;	300	2
90249-08075	PIN; BRAKE	800	5
90310-35010	SEAL; OIL; TOYOTA	500	3
90311-48009	SEAL;TOYOTA HZJ75 OUTPUT SHAFT	1,000	6
90311-62001	SEAL; OIL; AXLE HUB; SUIT	1,200	8
90311-62002	SEAL; INNER HUB; REAR;	1,300	8
90341-18006	PLUG: LEVEL; TOYOTA HZJ75	300	2
90341-18006	PLUG: LEVEL; TOYOTA HZJ75	300	2
90341-18057	PLUG: TEE; TOYOTA HZJ75	500	3
90368-45087	BEARING: OUTER; REAR AXLE; TOY	4,600	30
90368-49084	BEARING: HUB; INNER; TOYOTA	6,000	39
90385-19003	BUSHING; SHOCK ABSORBER;	400	3
90501-20012	SPRING; SHOE HOLD DOWN;TOYOTA	200	1
90506-12029	SPRING; TOYOTA	300	2
90506-18031	SPRING: TENSION; TOYOTA HZJ75	600	4
47624-60022	SPRING; BELL CRANK; TOYOTA	1,000	6
90506-20033	SPRING; BELL CRANK; TOYOTA	300	2
90917-06059	GASKET; EXHAUST; TOYOTA HZJ7#	500	3
99332-11260	BELT; V; A/C; 13A SECTION;	3,500	23
90915-30002	FILTER; OIL; SPIN-ON;	4,700	30
43422-60070	GASKET; HUB; REAR WHEEL;	200	1
43521-60011	NUT; LOCK; TOYOTA	700	5
43530-60130	HUB ASSY; FRONT AXLE; FREE	22,800	147
45047-69085	TIE ROD; END; RH; HDJ81/HZJ80;	5,200	33
47730-60120	CALIPER; BRAKE; FRONT; RIGHT	44,200	285
47750-60120	CALIPER; BRAKE; TOYOTA	44,200	285
90310-36003	SEAL; OIL; REAR AXLE; TOYOTA	300	2
04371-60070	SPIDER KIT; UNIVERSAL JOINT;	6,400	41
04466-60080	BRAKE PADS	10,900	70
16210-17070	HUB; FAN; VISCOUS; TOYOTA		
17801-61030	FILTER ELEMENT; AIR; TOYOTA		
23390-64480	FILTER ELEMENT; FUEL; TOTOYA	5,300	34
31210-36330	COVER ASSEMBLY; CLUTCH;		
31230-60200	BEARING; SELF ALIGNING; TOYOTA	8,700	56
31470-60290	CYLINDER ASSY; CLUTCH; TOYOTA	7,300	47
42431-60261	DISC; ROTOR; TOYOTA 70	11,900	77
43512-60141	BRAKE DISC; ROTOR; TOYOTA	14,500	93
45046-69135	TIE ROD END; TOYOTA 78 SERIES	5,200	33
48061-60050	BUSHING; SUB ASSY; REAR;	2,800	18
48706-60030	BUSHING; SUB ASSY; TOYOTA	1,700	11

48815-60170	BUSHING; FRONT STABILIZER BAR;	600	4
85110-60180	MOTOR; WIPER; ELECTRIC; TOYOTA		
90385-13009	BUSHING; FRONT; SUIT HZJ79	300	2
90385-11021	BUSH; STABILIZER LINK; TOYOTA	400	3
90942-02083	STUD; WHEEL; FRONT; TOYOTA	400	3
90942-01101	NUT; WHEEL; 79 SERIES	600	4
45044-69135	SUB ASSY; END; TOYOTA	7,000	45
45045-69075	TIE ROD END; LH; TOYOTA	5,900	38
90915-YZZD2	FILTER; OIL; SPIN ON;		
90311-95008	SEAL; REAR; MAIN; TOYOTA	2,500	16
90385-18022	BUSHING; REAR SUSPENSION	600	4
46580-60060	BRAKE SHOE; HANDBRAKE; TOYOTA	2,400	15
46540-60060	BRAKE SHOE; HANDBRAKE; TOYOTA	2,400	15
46550-60070	BRAKE SHOE; HANDBRAKE; TOYOTA	2,200	14
47449-30030	CUP, SHOE HOLD DOWN SPRING, NO.1(FOR PARKING BRAKE)	300	2
47449-40010	CUP: SPRING; TOYOTA PARKING	300	2
90501-16053	SPRING; HELICAL; TOYOTA	200	1
90948-02141	RETAINER: FRONT SHOCK	400	3
90201-10075	WASHER		
90116-10201	STUD; RIGHT HAND FRONT AXLE	200	1
43401-60080	SPINDLE SUB-ASSY, STEERING KNUCKLE	18,500	119
56121-60140	Weather Strip	7,400	48
47750-60110	CYLINDER ASSY, DISC BRAKE, REAR LH	29,600	191
47730-60110	CYLINDER ASSY, REAR DISC BRAKE, RH	29,600	191
04495-60070	BRAKE SHOE KIT; PARK BRAKE;	23,400	151
43405-60120	JOINT; CV; HZJ78-79 SERIES;	33,600	216
17801-51010	FILTER; AIR; SUIT VDJ7# V8	4,700	30
23390-51070	FILTER; FUEL; SUIT VDJ76 78 &		
04152-51010	FILTER ELEMENT; OIL; SUIT		
90117-14181	U BOLT; SUIT LANDCRUISER;	1,800	12
90363-12010	BEARING; SPIGOT; CLUTCH;	2,000	13
90311-41009	SEAL, TYPE T OIL (FOR FRONT AXLE DIFFERENTIAL CARRIER)	1,000	6
81170-60C10	HEADLAMP LH; TOYOTA		
48068-0K040	ARM; LOWER CONTROL; RIGHT;		
48190-0K010	CAM ASSY; CAMBER; TOYOTA		
48198-0K010	CAM CAMBER		
90178-T0081	NUT; FLANGE		
48702-60050	BUSH SUB-ASSY, LEADING ARM, NO.1	3,100	20
TLC12GVM	SPRING; REAR; TOYOTA;		
43509-60051	COVER SUB-ASSY, FREE WHEEL HUB	8,700	56
90981-13047	BULB(FOR HEADLAMP, NO.2)	3,000	19
84210-52050	SWITCH; REVERSE ALARM; TOYOTA	1,900	12
31230-60201	BEARING ASSY; CLUTCH; TOYOTA		
68720-60040	HINGE; FRONT DOOR; TOYOTA	2,600	17
90385-T0009	SPRING ASSY; LHR; TOYOTA		
90385-T0010	SHACKLE BUSH; HILUX		
04494-36300	REAR BRAKE SHOE KIT; COASTER B	27,200	175
47560-37082	WHEEL CYLINDER; REAR RH;	6,700	43
48820-0K030	LINK PIN; SWAY BAR LINK; FR;		
90311-68002	BEARING SEAL; COASTER BUS	1,200	8
69801-60030	WINDOW REGULATOR		
48802-60120	SWAY BAR LINK ASSEMBLY; FRONT;	6,400	41
47625-60010	BELLCRANK ARM; LH; TOYOTA	1,100	7
04465-26421	FRONT PADS; HIACE	13,700	88
04465-60340	BRAKE PAD KIT; FRONT DISC;	15,600	100
04495-0K120	BRAKE SHOE KIT; TOYOTA		
23390-0L041	FILTER ELEMENT; FUEL;	3,800	24
48047-60090	SEAT SUB ASSY; SPRING PLATE;	4,000	26

90916-02524	BELT; V-RIBBED	9,400	61
90942-02049	STUD; WHEEL; TOYOTA HILUX	400	3
47624-60010	BELLCRANK ARM; R/H; TOYOTA	1,100	7
99369-K2250	FAN BELT; VEE; SERPENTINE; 70		
47405-60010	SCREW SET; SHOE ADJUSTING;	1,700	11
90117-14073	U BOLT; RND; 260 X 85 X 14MM;	9,400	61
44310-60450	PUMP; POWER STEERING; TOYOTA		
37110-6A260	TAIL SHAFT ASSY; TOYOTA	75,600	487
28100-17061	MOTOR; STARTER; 12V; 100 SERIES		
42311-60200	AXLE; R/H REAR; TOYOTA	32,700	211
31321-52010	BRAKE PEDAL; RUBBER PAD;	300	2
17730-66010	CAP ASSY; PRE CLEANER;		
42428-60011	PLATE; LOCK NUT; WHEEL	1,600	10
90313-93003	SEAL; TYPE K; OIL; TOYOTA	2,900	19
69350-60080	LOCK MECH ASSY; BACK DOOR;	9,400	61
90214-29001	WASHER; CLAW; TOYOTA	500	3
43204-60032	SEAL SUB ASSY; STUB AXLE;	2,100	14
88440-35010	PULLEY; IDLER; W/ BEARINGS;AIR	5,000	32
86510-60280	HORN ASSY; HIGH PITCH		
90126-12005	BOLT; STEERING LINKAGE;	300	2
42323-60020	CONE; TOYOTA	300	2
90201-12019	WASHER; TOYOTA		
90170-12044	NUT; TOYOTA		
48810-0K010	SWAY BAR LINK; TOYOTA		
46420-0K041	CABLE ASSY; PARKING; DUAL CAB		
90381-35001	BUSH; FRONT SPINDLE; HZJ78/79;	500	3
56111-60A90	GLASS, WINDSHIELD		
45700-69175	DAMPER ASSY; STEERING; TOYOTA	9,700	62
04484-60110	PIN KIT, REAR SPRING	3,600	23
04483-60200	SHACKLE KIT; REAR; TOYOTA	7,500	48
45044-69145	RELAY; ROD END; RIGHT HAND;		
48630-0K040	CONTROL ARM; UPPER; LEFT HAND		
69206-10040-B6	HANDLE; SUB ASSY; INNER LH;	1,300	8
48190-0K030	CAM; ASSY; CAMBER		
47447-60010	PIN; TOYOTA	200	1
88460-60460	CORE; TOYOTA		
43411-60100	SHAFT; FRONT;INNER; RH; TOYOTA	6,800	44
90364-33011	BEARING NEEDLE; TOYOTA		
41204-35082	FLANGE; SUB ASSY; TOYOTA	5,600	36
42312-60140	AXLE; LH REAR; REAR DIFF; 79	43,600	281
88320-60560	COMPRESSOR ASSY; COOLER; R134A		
47624-60022	CRANK; BELL; RH; TOYOTA	1,000	6
84306-0K020	CABLE; SUB ASSY; SPIRAL;		
46430-0K041	CABLE; PARK BRAKE; TOYOTA		
77310-60100	CAP ASSY; FUEL TANK; NON		
87103-60431	MOTOR		
27060-17220	ALTERNATOR ASSY; TOYOTA; 80A;		
46410-6A030	CABLE ASSY; BRAKE; TOYOTA		
43211-60111	KNUCKLE; STEERING		
44110-60430	STEERING BOX; TOYOTA	141,300	910
33403-69175	SPEEDO; DRIVE GEAR; TOYOTA	1,300	8
33404-30040	SPEEDO; SHAFT; TOYOTA	1,400	9
45046-09281	TIE ROD; END; LH; TOYOTA		
04465-35290	PAD KIT; DISC BRAKE; TOYOTA	15,300	98
04465-36020	BRAKE PAD; FRT; SUIT COASTER	19,400	125
04483-60130	SHACKLE KIT; REAR; TOYOTA		
88320-36530	COMPRESSOR ASSY, COOLER		
17567-17020	CUSHION MOUNT; EXHAUST;	900	6

29300-17010	PUMP ASSY; TOYOTA	46,400	299
33403-69185	SPEEDO; DRV GEAR; 79 SERIES;	1,300	8
78111-95110	ACCELERATION PEDAL RUBBER;	700	5
44320-60171	PUMP; POWER STEERING; HZJ105	112,600	725
47910-60141	VALVE ASSY, LOAD SENSING PROPORTIONING	12,700	82
48061-60010	SUB; ARM BUSH; 79 SERIES;	3,700	24
36318-60020	SEAL; TRANSFER FRONT DRIVE	800	5
36340-60100	ROD ASSY; HIGH/LOW SHIFT;	1,400	9
48805-60100	BAR; SWAY; REAR; TOYOTA		
48815-26020	BUSHING; D RUBBER; STABILISER	700	5
47447-30020	PIN; SHOE HOLD DOWN; TOYOTA	200	1
47447-50010	PIN; SHOE HOLD DOWN; TOYOTA	200	1
47625-60022	BELLCRANK ARM; LH; TOYOTA	1,000	6
69205-10040-B7	HANDLE; INNER DOOR; FRONT;	1,300	8
90560-10044	SPACER; TOYOTA	200	1
83181-20040	SENSOR; SPEEDOMETER;		
84222-60041	SWITCH; TRANSFER; TOYOTA	3,800	24
84550-33010	SWITCH; HANDBRAKE; TOYOTA	1,700	11
48046-60100	SPRING SADDLE; RH; TOYOTA	4,100	26
90105-10424	BOLT; FRONT DRIVE SHAFT;	200	1
90105-11044	BOLT; TOYOTA	200	1
90105-12175	BOLT; CALIPER; FRONT; TOYOTA	300	2
90119-10765	BOLT; SUSPENSION; TOYOTA		
90178-10006	NUT; FRONT TAILSHAFT; TOYOTA	200	1
94184-01001	NUT; TOYOTA	300	2
84306-52100	CABLE ASSY; SPIRAL; TOYOTA	17,900	115
67881-60040	SEAL; DOOR; REAR; RH; PC;		
67882-60041	SEAL; DOOR; REAR; LH; PC;		
68111-60170	WINDOW; DRIVER SIDE; TINTED	16,800	108
68610-60040	DOOR STOP; TOYOTA	3,200	21
68710-60040	HINGE ASSY, FRONT DOOR, UPPER RH	2,600	17
68730-60020	HINGE; LOWER; RH;	2,900	19
69260-10040-B7	HANDLE ASSY; FRONT; WINDOW	1,400	9
69310-60070	LOCK ASSY; RIGHT HAND; FRONT	7,400	48
69320-60070	LOCK ASSY, FRONT DOOR, LH	7,400	48
48069-0K040	ARM; LOWER CONTROL; LEFT;		
90507-20016	SPRING; TENSION; PARKING BRAKE	200	1
90560-10275	BUSH	200	1
68740-60020	HINGE ASSY; LWR DOOR; TOYOTA	2,900	19
53510-60220	LOCK ASSY; HOOD BONNET; TOYOTA	2,800	18
90521-34005	SNAP RING; HOLE; TOYOTA	200	1
90507-23014	SPRING; TENSION; HANDBRAKE	300	2
04466-60090	PAD KIT; DISC BRAKE; TOYOTA	10,900	70
45411-60370	ARM; PITMAN; TOYOTA 79	7,400	48
90366-20003	BEARING; KNUCKLE; TAPER	2,400	15
42431-60250	DRUM ASSY; REAR; TOYOTA	15,600	100
68132-60190	GLASS; BACK DOOR; LH; TOYOTA		
90987-02027	RELAY; FOG LAMP; TAIL; TOYOTA	4,100	26
48802-60090	LINK	1,700	11
90179-14023	NUT; TOYOTA		
90201-15012	WASHER; PLATE; TOYOTA;		
48610-0K040	CONTROL ARM; UPPER; RH FRT;		
53285-60090	SNORKEL DUCT; LOWER; TOYOTA		
17801-51020	(blank)		
53630-60180	CABLE ASSY; HOOD LOCK CONTROL;	1,400	9
45612-60110	ARM; STEERING; TOYOTA	9,900	64
43235-60020	SHIM; SWIVEL; HUB 1.00; TOYOTA	300	2
48069-26160	ARM; SUB ASSY; FRONT		

37140-60540	DRIVE SHAFT; FRONT; SUIT HZJ79	51,600	332
73210-26731	SEAT BELT; DRIVERS; TOYOTA		
81130-0K230	LIGHT; FRT; RH; TOYOTA		
48509-60040	SHOCK ABSORBER; RETAINER/	1,000	6
81130-60C30	UNIT ASSY, HEADLAMP, RH		
90341-18032	PLUG; FRONT DIFF FILLER	300	2
48531-69645	SHOCK ABSORBER; REAR; SUIT	11,600	75
90916-02452	FAN BELT; TOYOTA	6,900	44
TOPZQ-2960290	BULLBAR; STEEL; 79 SERIES;		
90981-13058	GLOBE; HEADLIGHT; H4; 12V;60/5	3,000	19
36343-60020	PIN; H4; TOYOTA	700	5
90341-18040	PLUG; DRAIN; DIFF; TOYOTA	400	3
45503-09331	ROD; STEERING; END;		
36110-6E181	TRANSFER BOX; TOYOTA		
87940-60372	MIRROR ASSY, LEFT HAND		
47616-35030	WIRE; PARKING BRAKE; R/H;	1,100	7
23600-19075	HOLDER & NOZZLE SET; TOYOTA		
67001-60490	DOOR; FRONT; RH; 79 SERIES		
87910-60142	MIRROR ASSY, RIGHT HAND		
90113-10003	SCREW; HUB; REAR; DRUMLAND	200	1
16400-17400	RADIATOR ASSY		
47628-35020	BELLCRANK BRACKET; PARKING	1,600	10
45411-60380	ARM; PITMAN; TOYOTA		
62711-60430	GLASS; WINDOW; FRT QUARTER;		
48674-26040	CUSHION; STRUT BAR; TOYOTA	1,100	7
04371-0K082	SPIDER KIT; UNI JOINT; PROP		
90385-19006	BUSHING; TOYOTA	400	3
48815-26370	BUSHING; TOYOTA	900	6
90385-16009	BUSHING; TOYOTA	300	2
43412-60140	SHAFT; FRT AXLE; INNER; LH;	14,200	91
67006-60142	PANEL; SUB ASSY; REAR DOOR;		
12361-17091	INSULATOR; ENGINE; TOYOTA		
90201-10203	WASHER; TOYOTA	300	2
44610-6A280	BOOSTER ASSY; BRAKE; TOYOTA		
52201-25020	CUSHION SUB ASSY; TOYOTA	1,700	11
90440-17021	TUBE; TOYOTA	800	5
52203-60030	CUSHION SUB ASSY; TOYOTA	3,000	19
23380-17531	CAP ASSY; FUEL FILTER; TOYOTA		
22100-1C190	PUMP; FUEL INJECTION; TOYOTA		
88320-37080	COMPRESSOR ASSY; AIRCON;	94,200	606
36318-60020	BOOT, TRANSFER FRONT	800	5
36340-60100	ROD ASSY, HIGH AND LOW	1,400	9
36343-60020	SHOE, FRONT DRIVE SHIFT	700	5
52201-25020	CAB MOUNTING CUSHION	1,700	11
52203-60030	CAB MOUNTING CUSHION	3,000	19
90201-10203	WASHER	300	2
90440-17021	TUBE	800	5
94184-01001	NUT; TOYOTA	300	2

Legend:

 no similar part in Japan